

USER MANUAL FOR SUBSEA SAW 15-100 mm

Document title : *UMA-4917-001/7146-001 Subsea Saw*
IKM TECHNOLOGY AS ref. : *P4917/P7146*
Customer ref. : *Subsea Tool*



IKM Technology AS


Rev.	Date	Reason For Issue	Prepared	Checked	Approved
01	17.06.2016	Issued for use	KF	RH	KF

BTE.12-26 User Manual		Page 2 of 20	
Dok.ID:	010984	Issue date:	2014.12.29
Approved date:	2015.02.13	Rev.no:	002
Author:	Gabrielsen Trine (Technique)	Owner:	IKM Administrator
Approved by:	Reinsnos Jostein (Technique)	Company:	IKM Technique AS



USER MANUAL FOR SUBSEA SAW 15-100 MM	1
1 GENERAL INFORMATION.....	3
1.1 Abbreviations.....	4
1.2 References	5
2 TECHNICAL SPESIFICATION	6
3 SAFETY	7
3.1 General – Operations.....	7
3.2 General – Hydraulic	7
3.3 General – Mechanical	7
3.4 Subsea Saw	8
4 OPERATIONAL DESCRIPTION	9
4.1 Preparation on the vessel prior to operations.....	9
4.2 Feed flow regulator	9
4.3 Subsea use.....	10
5 MAINTENANCE.....	11
5.1 After operations	11
5.2 Periodic maintenance	11
5.3 Repair work	11
5.4 Replacement of blade	11
5.5 Replacement of motor.....	14
5.6 Replacement of gripper.....	14
5.7 Replacement of gripper cylinders.....	14
6 SPARE PART LIST	15
7 REVISION CHANGES.....	16
8 CONTACT INFORMATION	16
9 APPENDIX	17

BTE.12-26 User Manual				Page 3 of 20
Dok.ID:	010984	Issue date:	2014.12.29	
Approved date:	2015.02.13	Rev.no:	002	
Author:	Gabrielsen Trine (Technique)	Owner:	IKM Administrator	
Approved by:	Reinsnos Jostein (Technique)	Company:	IKM Technique AS	




1 GENERAL INFORMATION

This manual is a user manual for the hydraulic subsea saw 15-115mm.

The Subsea Saw has a rotating blade, which is 250-305 mm in diameter. It is built to be used by an ROV, controlled by manipulator and with a hydraulic supply from the ROV to drive the saw.

It is designed to cut steel pipes/profiles, armored cable and flexirisers. Standard blades to be supplied with the saw are carbide and diamond types. The saw has clamps to hold on to the object, which is being cut. The clamps can be replaced if a specific interface is required.


BTE.12-26 User Manual			Page 4 of 20
Dok.ID:	010984	Issue date:	2014.12.29
Approved date:	2015.02.13	Rev.no:	002
Author:	Gabrielsen Trine (Technique)	Owner:	IKM Administrator
Approved by:	Reinsnos Jostein (Technique)	Company:	IKM Technique AS



1.1 Abbreviations


HPU	Hydraulic Power Unit
ROV	Remotely Operated Vehicle
kg	Kilo gram
mm	Milli meter
BSP	British standard pipe
JIC	Joint industry council
CCM	Cubic centimeter
LPM	Liter per minute
Nm	Newton meter
CCW	Counter clockwise

BTE.12-26 User Manual				Page 5 of 20
Dok.ID:	010984	Issue date:	2014.12.29	
Approved date:	2015.02.13	Rev.no:	002	
Author:	Gabrielsen Trine (Technique)	Owner:	IKM Administrator	
Approved by:	Reinsnos Jostein (Technique)	Company:	IKM Technique AS	



1.2 References

Doc nr	Description	Rev.	Issued	Can be found
4917-001	Drawings of Subsea Saws			Appendix A
7146-001	Drawings of Subsea Saws			Appendix A
	Hydraulic Schematic			Appendix B
	CHAR-Lynn manual			Appendix C
	Tooling ref/track record: Emas, IKMS, C-Innovation, Envirent			

BTE.12-26 User Manual				Page 6 of 20	
Dok.ID:	010984	Issue date:	2014.12.29		
Approved date:	2015.02.13	Rev.no:	002		
Author:	Gabrielsen Trine (Technique)	Owner:	IKM Administrator		
Approved by:	Reinsnos Jostein (Technique)	Company:	IKM Technique AS		

2 TECHNICAL SPESIFICATION

The hydraulic saw 12-115mm main components is a steel frame, a cutting blade, and two clamps with hydraulic cylinders to hold on to the objects being cut, and a Eaton hydraulic attached to a cylinder which regulates the cutting feed.

The Hydraulic supply and control of the Subsea Saw is by means of and through the ROV system. Recommended cutting diameter is set to 15-100 mm.

Weight:

Saw:	In air:	In water:
7146-001	24 kg	18 kg

Maximum dimensions:

Saw:	Length:	Width:	Height:
7146-001	621 mm	318 mm	351 mm


Hydraulic/motor:

	7146-001
Motor	Eaton
Work/max pressure	125 bar
Flow	45-70 LPM
Rec. feeding rate	10-15 mm/min
Connections	Various JIC and BSP
RPM	15-300 RPM
Torque	

Cutting diameter:

Saw:	Min:	Max:
7146-001	15 mm	100 mm

BTE.12-26 User Manual				Page 7 of 20	
Dok.ID:	010984	Issue date:	2014.12.29		
Approved date:	2015.02.13	Rev.no:	002		
Author:	Gabrielsen Trine (Technique)	Owner:	IKM Administrator		
Approved by:	Reinsnos Jostein (Technique)	Company:	IKM Technique AS		



3 SAFETY

3.1 General – Operations

Only authorised people and qualified personnel should work on the system, and take suitable precautions to prevent any potential injuries. Always adhere to authorised working practices, and use the correct tools for the job. To facilitate this, make sure that these are available before commencing the test.

Ensure that the working area is kept clear and uncluttered.

3.2 General – Hydraulic

Do not work on pressurised systems. Hydraulic systems contain a large amount of stored energy when pressurised, therefore the system (including any accumulators) should be de-pressurised, and the power pack switched off, prior to working on the system. Exceptions to this would be system adjustments to components requiring the presence of pressure and/or flow.

Any personnel authorised to work on the system must have a complete understanding of the operation of the hydraulic system, so that they will be aware of any system liable to remain pressurised or hazardous in any other way. Ensure that all personnel are clear of any mechanical/hydraulic system likely to move if pressure to system actuators is released or applied.

Do not attempt to tighten any leaking fittings whilst under pressure. A hose/fitting rupture could result, leading to injury from flying components and/or oil jets.

Regularly inspect fittings and pipe-work for mechanical damage. If any such damage is found, the item must be repaired or replaced as necessary before pressure is applied to the system. Do not allow damaged fittings to remain in service.

Take care when inspecting, commissioning, repairing or maintaining the system to avoid jets of oil issuing from open orifices; pipe ends etc. if pressure is applied. Particular care should be taken to protect the eyes.

Hydraulic components may be heavy and slippery when covered in oil. Ensure that adequate protective clothing and footwear is used.


Any moving component should be treated with caution when the system is pressurised during operation, and especially during on-deck testing and repair. Keep clear of all moving components, and take all necessary precautions to avoid injury when working on these systems by preventing movement of any components likely to cause injury.

3.3 General – Mechanical

Beware of and keep clear of all moving components. Do not work on the system whilst power is applied, or if there is any potential for components to move.

Ensure that all load bearing components are adequately and regularly inspected. If damage is found the component must be repaired/replaced as necessary. Do not allow damaged components to remain in service.

BTE.12-26 User Manual				Page 8 of 20
Dok.ID:	010984	Issue date:	2014.12.29	
Approved date:	2015.02.13	Rev.no:	002	
Author:	Gabrielsen Trine (Technique)	Owner:	IKM Administrator	
Approved by:	Reinsnos Jostein (Technique)	Company:	IKM Technique AS	



Always ensure that items are correctly and adequately supported before removal, and that authorised lifting equipment and procedures are used.

Note: trying to lift heavy components in an awkward position by hand without the assistance of correct lifting equipment, or lifting any component without adopting the correct stance, can lead to serious injury.

Ensure that when working within or underneath the machine that your presence is known to your supervisor. If working underneath the machine, always ensure that there are no loose or unsupported assemblies, components or tools above.

3.4 Subsea Saw

The Subsea Saw is a rotating cutting tool and damage to health, life and property can occur if rules are not properly followed. The Subsea Saw should be secured in a vice or similar prior to connect up to hydraulic power. Worksite is to be secured prior to add power to the unit. In case of testing with ROV, secure are prior to power up ROV.

BTE.12-26 User Manual				Page 9 of 20
Dok.ID:	010984	Issue date:	2014.12.29	
Approved date:	2015.02.13	Rev.no:	002	
Author:	Gabrielsen Trine (Technique)	Owner:	IKM Administrator	
Approved by:	Reinsnos Jostein (Technique)	Company:	IKM Technique AS	



4 OPERATIONAL DESCRIPTION

The following description is a generic description of preparation and use of the Subsea Claw Cutter. Customers are advised to adapt the following information to their own specific operations and specific work area.

4.1 Preparation on the vessel prior to operations

- Unpack all parts and check for transport damages
- Verify that all parts on equipment list is present
- Check the cutting blade for damage.
- Check that the blade is installed correctly, not loose and correct direction.
- Check all hoses and fittings for damage and leaks.
- Check that all bolts are in place and tight.
- Connect the hydraulic hoses to the ROV corresponding hydraulic system.
- Ensure that the piston on the feed cylinder is fully retracted.


Function test:

- Do not start the saw on deck without securing the area.
- Run the clamp cylinders to full stroke.
- Time the motor feed rate.
- If the motor feed rate is too fast/slow, adjust it using the feed flow regulator and try again.
(This is also dependent on the ROV flow and pressure).

4.2 Feed flow regulator


Adjustment flow wheel:

Locking wheel:

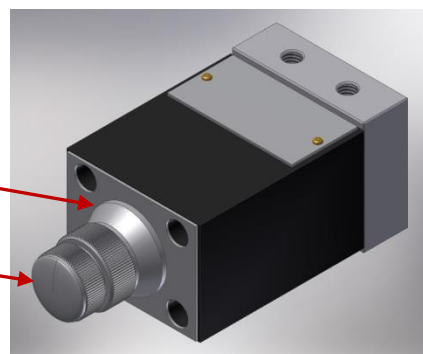

- The regulator can be adjusted to change the feed rate.
- Start by loosening the locking wheel CCW while holding the adjustment flow wheel from turning.
- Adjust the flow wheel in small increments.
- Apply adequate lubrication to thread and spring washer. Recommended lubrication: Aqua lube/aqua shield.
- Make sure spring washer is in place before tightening together again.


BTE.12-26 User Manual				Page 10 of 20
Dok.ID:	010984	Issue date:	2014.12.29	
Approved date:	2015.02.13	Rev.no:	002	
Author:	Gabrielsen Trine (Technique)	Owner:	IKM Administrator	
Approved by:	Reinsnos Jostein (Technique)	Company:	IKM Technique AS	



4.3 Subsea use

- Ensure all the checks and preparations have been performed.
- Ensure the saw is securely fastened to the ROV using the designated ROV handles.
- OR it is securely connected to a crane.
- Lower the saw into position.
- Run the clamp Actuators to lock it around the area of object to be cut. (Ensure it is securely fastened)
- Run the saw, this will cause the feed cylinder to activate.
- Perform the cut.
- When the cut is finished retract the saw blade.
- Retract the cylinders for the clamp.
- Return to deck and perform "After operations maintenance".

BTE.12-26 User Manual				Page 11 of 20
Dok.ID:	010984	Issue date:	2014.12.29	
Approved date:	2015.02.13	Rev.no:	002	
Author:	Gabrielsen Trine (Technique)	Owner:	IKM Administrator	
Approved by:	Reinsnos Jostein (Technique)	Company:	IKM Technique AS	



5 MAINTENANCE

Repair and maintenance work on the saw shall only be performed by qualified personnel, specifically trained on this equipment.

5.1 After operations

- Plug hydraulic hoses to prevent hydraulic leaks and dirt to enter the hydraulic system.
- Clean the tool with fresh water. Apply an anti-corrosive layer on the tool when it is clean, WD40 or similar.
- Check hydraulic hoses, bolts, etc.
- Check the cutting blade for damage.
- When stored make sure the cylinders is fully retracted, to avoid corrosion.
- Place tool in its original transport case/storage box and secure with straps.

5.2 Periodic maintenance

- Start with “After operations” maintenance procedure.
- A careful review of the entire tool is mandatory. This includes a visual check of the tool with hoses and a function test. Be sure that there is no leaks and that the feeding rate is correct.
- Replace or fix parts if needed. Damaged paint must be repainted.

5.3 Repair work

Condition for repair work:


All hydraulic connection removed from the Subsea Saw
Cutting blade edge secured or blade removed

5.4 Replacement of blade

Each saw is delivered with a blade attached to the saw. In order to replace the blade, first unscrew the two bolts that are on the blade holder. The blade is now loose and can be removed from the saw.

In order to install a new blade, make sure to orientate the blade in the correct cutting orientation. Install the bolts in reverse of removing the blade.

BTE.12-26 User Manual				Page 12 of 20	
Dok.ID:	010984	Issue date:	2014.12.29		
Approved date:	2015.02.13	Rev.no:	002		
Author:	Gabrielsen Trine (Technique)	Owner:	IKM Administrator		
Approved by:	Reinsnos Jostein (Technique)	Company:	IKM Technique AS		




Blade holder in two pieces




Blade holder assembled


Dok.ID:	010984	Issue date:	2014.12.29
Approved date:	2015.02.13	Rev.no:	002
Author:	Gabrielsen Trine (Technique)	Owner:	IKM Administrator
Approved by:	Reinsnos Jostein (Technique)	Company:	IKM Technique AS

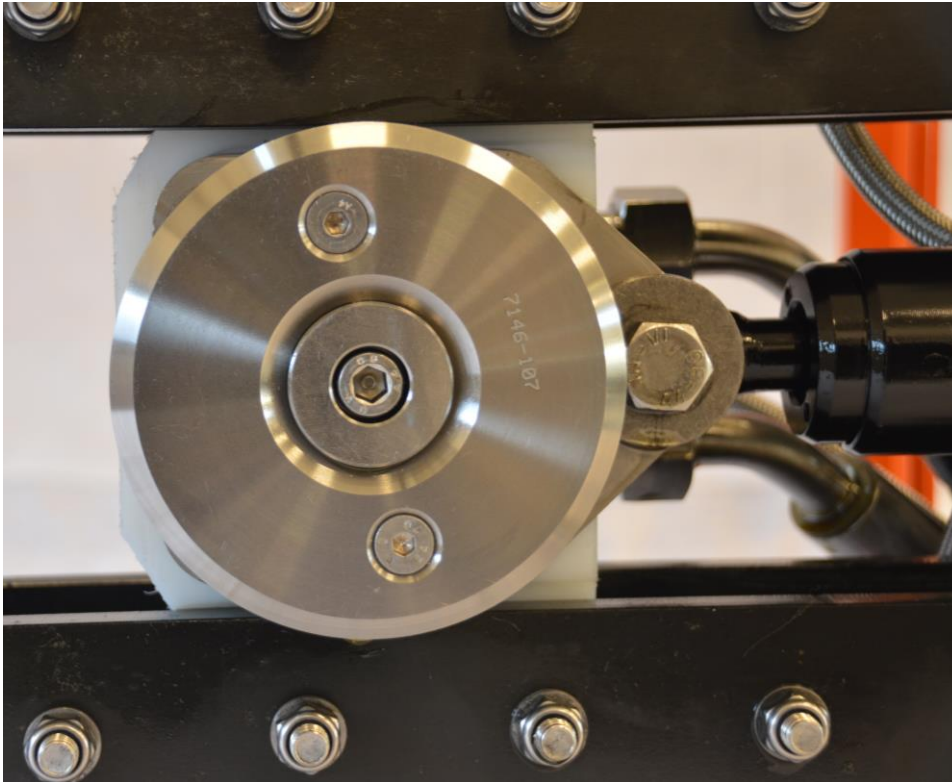

New blade installed

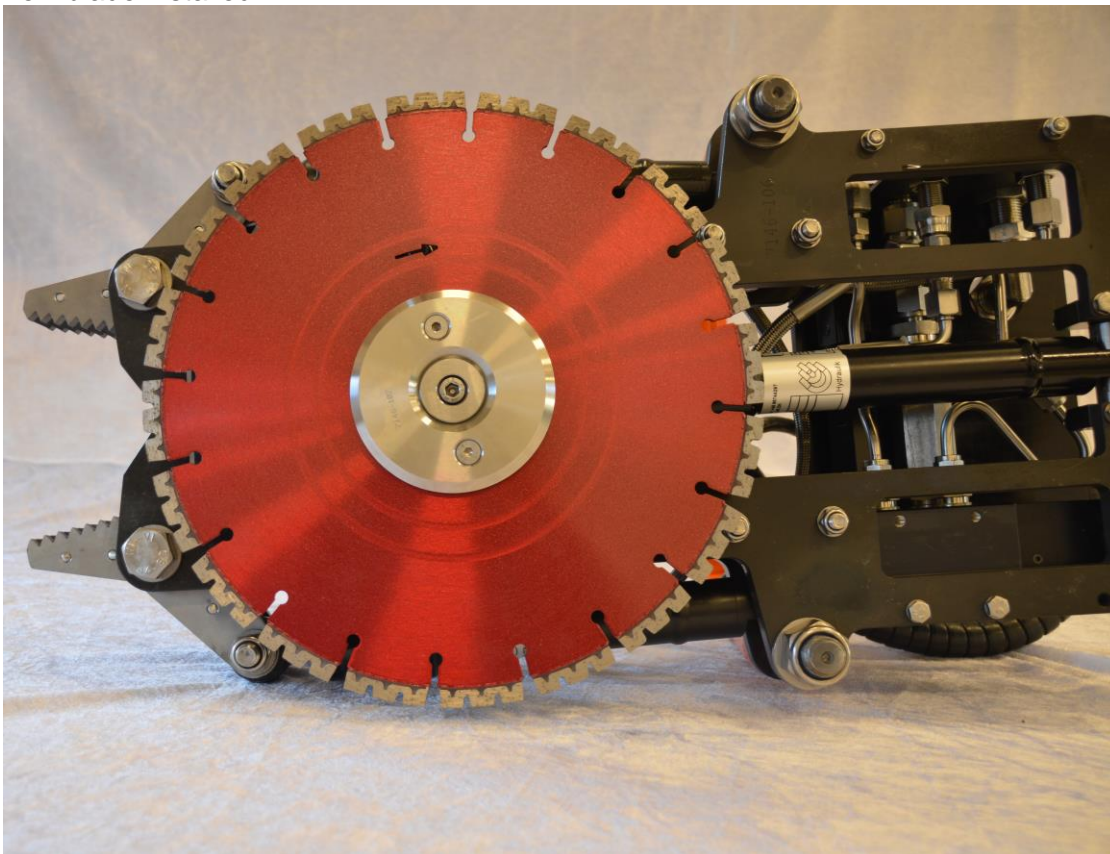

BTE.12-26 User Manual		Page 14 of 20	
Dok.ID:	010984	Issue date:	2014.12.29
Approved date:	2015.02.13	Rev.no:	002
Author:	Gabrielsen Trine (Technique)	Owner:	IKM Administrator
Approved by:	Reinsnos Jostein (Technique)	Company:	IKM Technique AS



5.5 Replacement of motor

The motor is normally an item that will outlive the saw. However, in case it has been subject to contaminated oil, overpressure or other uncontrolled conditions, the motor might need to be replaced.

- Remove blade as per 6.1
- Disconnect hydraulic hose connection and blank both sides with blind caps.
- These same applies to the case drain connection on the top of the motor.
- Remove bolt attachment between feed cylinder and motor interface.
- Remove centre bolt on blade holder if not already done
- Remove four bolts from the underside of the saw. These bolts attach the motor to the slider (white of colour)

5.6 Replacement of gripper

The two grippers are replaceable and must be disconnected from their hinge points and the cylinder rod. First unscrew the bolt connection on the cylinder rod end. Thereafter the bolt connection/hinge point needs to be unscrewed. The grippers are now loose.

To install grippers, insert the gripper between the body plates of the cutter and install the bolt connection. Nuts to be positioned on the upper side.

Nuts to be positioned on the lower side of the cutter.

5.7 Replacement of gripper cylinders

Disconnect hydraulic hose connection and blank both sides with blind caps.

Disconnect the bolt connection of the cylinder rod and Gripper as per 6.3

Disconnect the retaining ring on the end of each cylinder and remove the cylinder.


Installation is the reverse way

BTE.12-26 User Manual				Page 15 of 20	
Dok.ID:	010984	Issue date:	2014.12.29		
Approved date:	2015.02.13	Rev.no:	002		
Author:	Gabrielsen Trine (Technique)	Owner:	IKM Administrator		
Approved by:	Reinsnos Jostein (Technique)	Company:	IKM Technique AS		



6 SPARE PART LIST

- Cutting blade
- Hydraulic hoses and connections.
- Nuts and bolts.
- Handles
- Claws
- Motor
-

BTE.12-26 User Manual				Page 16 of 20	
Dok.ID:	010984	Issue date:	2014.12.29		
Approved date:	2015.02.13	Rev.no:	002		
Author:	Gabrielsen Trine (Technique)	Owner:	IKM Administrator		
Approved by:	Reinsnos Jostein (Technique)	Company:	IKM Technique AS		

7 REVISION CHANGES

Revision	Procedure change	Author
01	<i>Original version</i>	KF


8 CONTACT INFORMATION

All enquiries relating to the tooling should be addressed to:

IKM Technology AS
 Nordlysveien 7,
 N-4340 Bryne
 Norway


Phone, 24/7 : +47 51 80 05 20
 Mail : IKMtechnology@IKM.no

BTE.12-26 User Manual				Page 17 of 20	
Dok.ID:	010984	Issue date:	2014.12.29		
Approved date:	2015.02.13	Rev.no:	002		
Author:	Gabrielsen Trine (Technique)	Owner:	IKM Administrator		
Approved by:	Reinsnos Jostein (Technique)	Company:	IKM Technique AS		






9 APPENDIX

	Doc number	Description	Rev
<i>Appendix A</i>	<i>4917-001</i>	<i>Drawings Subsea Saw 15-90 mm</i>	
<i>Appendix A</i>	<i>7149-001</i>	<i>Drawings Subsea Saw 15-100 mm</i>	02
<i>Appendix B</i>		<i>Hydraulic Schematic</i>	

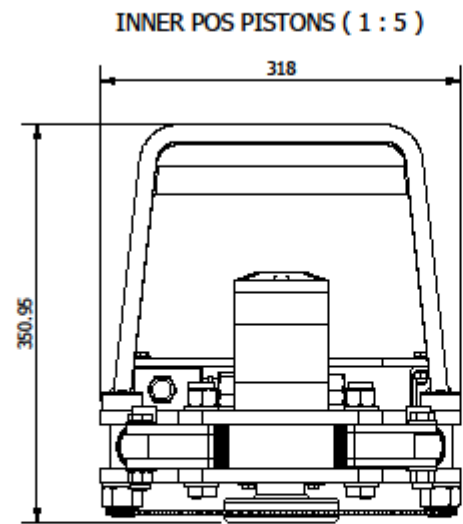


A ↑

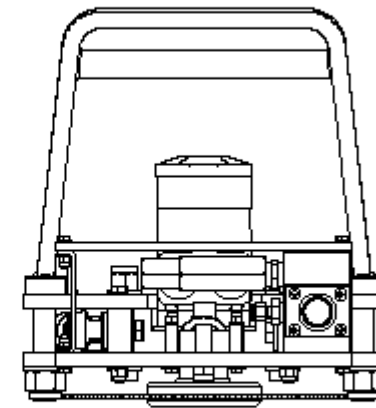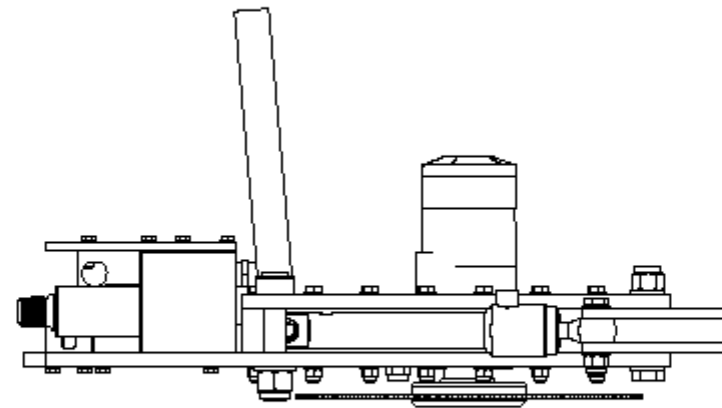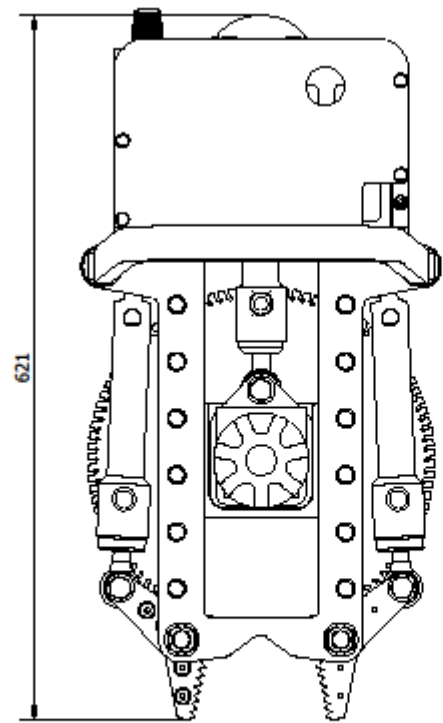


A (1 : 5)

Claws can be adjusted to cut Ø15-100 mm

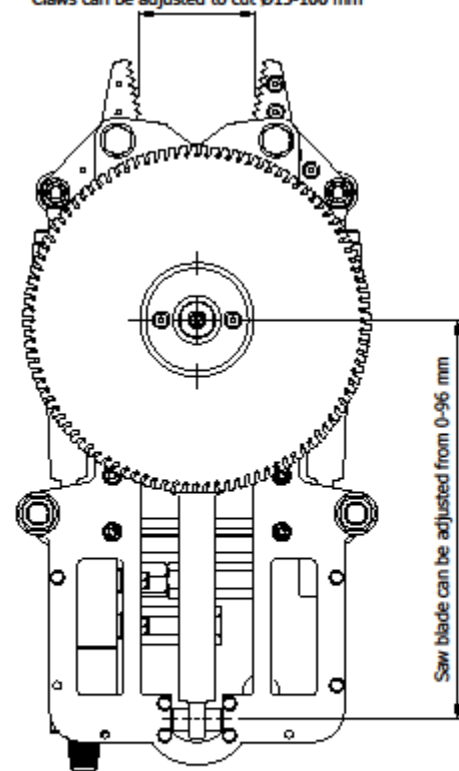

REV	DATE	DESCRIPTION	JJK	EN	JJK
02	31.10.2013	FOR PRESENTATION	JJK		
01	09.07.2013	FOR CONSTRUCTION	JJK	EN	JJK
			BY	CHKD	APPR

WEIGHT:		 IKM TECHNIQUE AS Tomroseveien 12, 4315 SANDNES Tel.: 51 80 05 20 E-mail: ikmtechnique@ikm.no Web: www.ikm.no
IN AIR	23,5 kg	
IN WATER	17,8 kg	

UNLESS OTHERWISE SPECIFIED
ALL DIMENSIONS ARE IN MILLIMETRES

TOLERANCES:
LINEAR: ISO 2768-1 m
ANGULAR: ISO 2768-1 m
EDGES: ISO 2768-1 m

REMOVE ALL BURRS
BREAK ALL SHARP EDGES


FIRST ANGLE PROJECTION

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION WHICH IS THE PROPERTY OF IKM TECHNIQUE AS. NONE OF THE INFORMATION CONTAINED HEREIN MAY BE DISCLOSED, REPRODUCED, DISTRIBUTED OR USED WITHOUT WRITTEN CONSENT FROM IKM TECHNIQUE AS.

PROJECT TITLE: P7146
DRAWING TITLE: SUBSEA SAW Ø15-100 mm

SHEET SIZE: A3	SHEET NO.: 1 OF 2	SCALE: 1:5
DRAWING NO.: 7146-001		LATEST REV.: 02

PARTS LIST					
ITEM	QTY	PART NUMBER	MATERIAL	MASS	DESCRIPTION
1	1	7146-002		4.43 kg	
2	1	7146-003		9.09 kg	
3	1	7146-004	Welded Stainless Steel, 440C	3.39 kg	
4	2	7146-005		0.61 kg	
5	1	7146-111	Stainless Steel, S165M	0.08 kg	
6	1	7146-112	Stainless Steel, S165M	0.02 kg	
7	2	7146-113	Stainless Steel, S165M	0.12 kg	
8	1	7146-121	Aluminium, 6082-T6	1.11 kg	Valve Block
9	1	7146-122	Aluminium, 5052-0	0.09 kg	
10	1	7146-123	Aluminium, 5052-0	0 kg	
11	1	7146-124	POM-C (black)	0.46 kg	
12	1	7146-Check valve	Stainless Steel, AISI 316L	0.37 kg	1/2" BSP
13	1	7146-Flow regulator	As Supplied	0.2 kg	QV-06/1
14	1	7146-Piston		0.23 kg	NH30-SD-25/16 X 120-S
15	2	7146-Piston 2		0.24 kg	NH30-SD-25/16 X 100-S
16	1	7146-Pressure relief valve	Stainless Steel, AISI 316L	0.38 kg	SVC56C
17	2	DIN 471 - 12x1	Stainless Steel	0 kg	Retaining rings for shaft
18	1	ISO 4014 - M12 x 50	Stainless Steel, 440C	0.06 kg	
19	2	ISO 4014 - M12 x 60	Stainless Steel, 440C	0.07 kg	
20	2	ISO 4014 - M16 x 90	Stainless Steel, 440C	0.18 kg	
21	4	ISO 4014 - M6 x 50	Stainless Steel, 440C	0.01 kg	
22	14	ISO 4014 - M8 x 80	Stainless Steel, 440C	0.04 kg	
23	2	ISO 4017 - M12 x 20	Stainless Steel, 440C	0.04 kg	
24	3	ISO 4017 - M6 x 20	Stainless Steel, 440C	0.01 kg	
25	2	ISO 4017 - M6 x 25	Stainless Steel, 440C	0.01 kg	
26	2	ISO 4017 - M6 x 30	Stainless Steel, 440C	0.01 kg	
27	3	ISO 4145 Hexagon Nipple N8 1/2	Non-Alloy Steel	0.04 kg	ISO 4145 Non-alloy steel fittings threaded to ISO 7/1 - Hexagon Nipple N8
28	3	ISO 7041 - M12	Stainless Steel	0.02 kg	
29	2	ISO 7041 - M16	Stainless Steel	0.05 kg	
30	2	ISO 7041 - M20	Stainless Steel	0.1 kg	
31	8	ISO 7041 - M6	Stainless Steel	0 kg	
32	14	ISO 7041 - M8	Stainless Steel	0.01 kg	
33	6	ISO 7089 - 12 - 140 HV	Stainless Steel	0.01 kg	
34	4	ISO 7089 - 16 - 140 HV	Stainless Steel	0.01 kg	
35	2	ISO 7089 - 20 - 140 HV	Stainless Steel	0.02 kg	
36	19	ISO 7089 - 6 - 140 HV	Stainless Steel	0 kg	
37	28	ISO 7089 - 8 - 140 HV	Stainless Steel	0 kg	
38	2	ISO 7093 A - ST 12 - 140 HV	Stainless Steel	0.02 kg	
39	2	SS-400-1-4RS	Stainless Steel, AISI 316L	0.05 kg	Male Connector, 1/4" Tube OD x 1/4" BSP

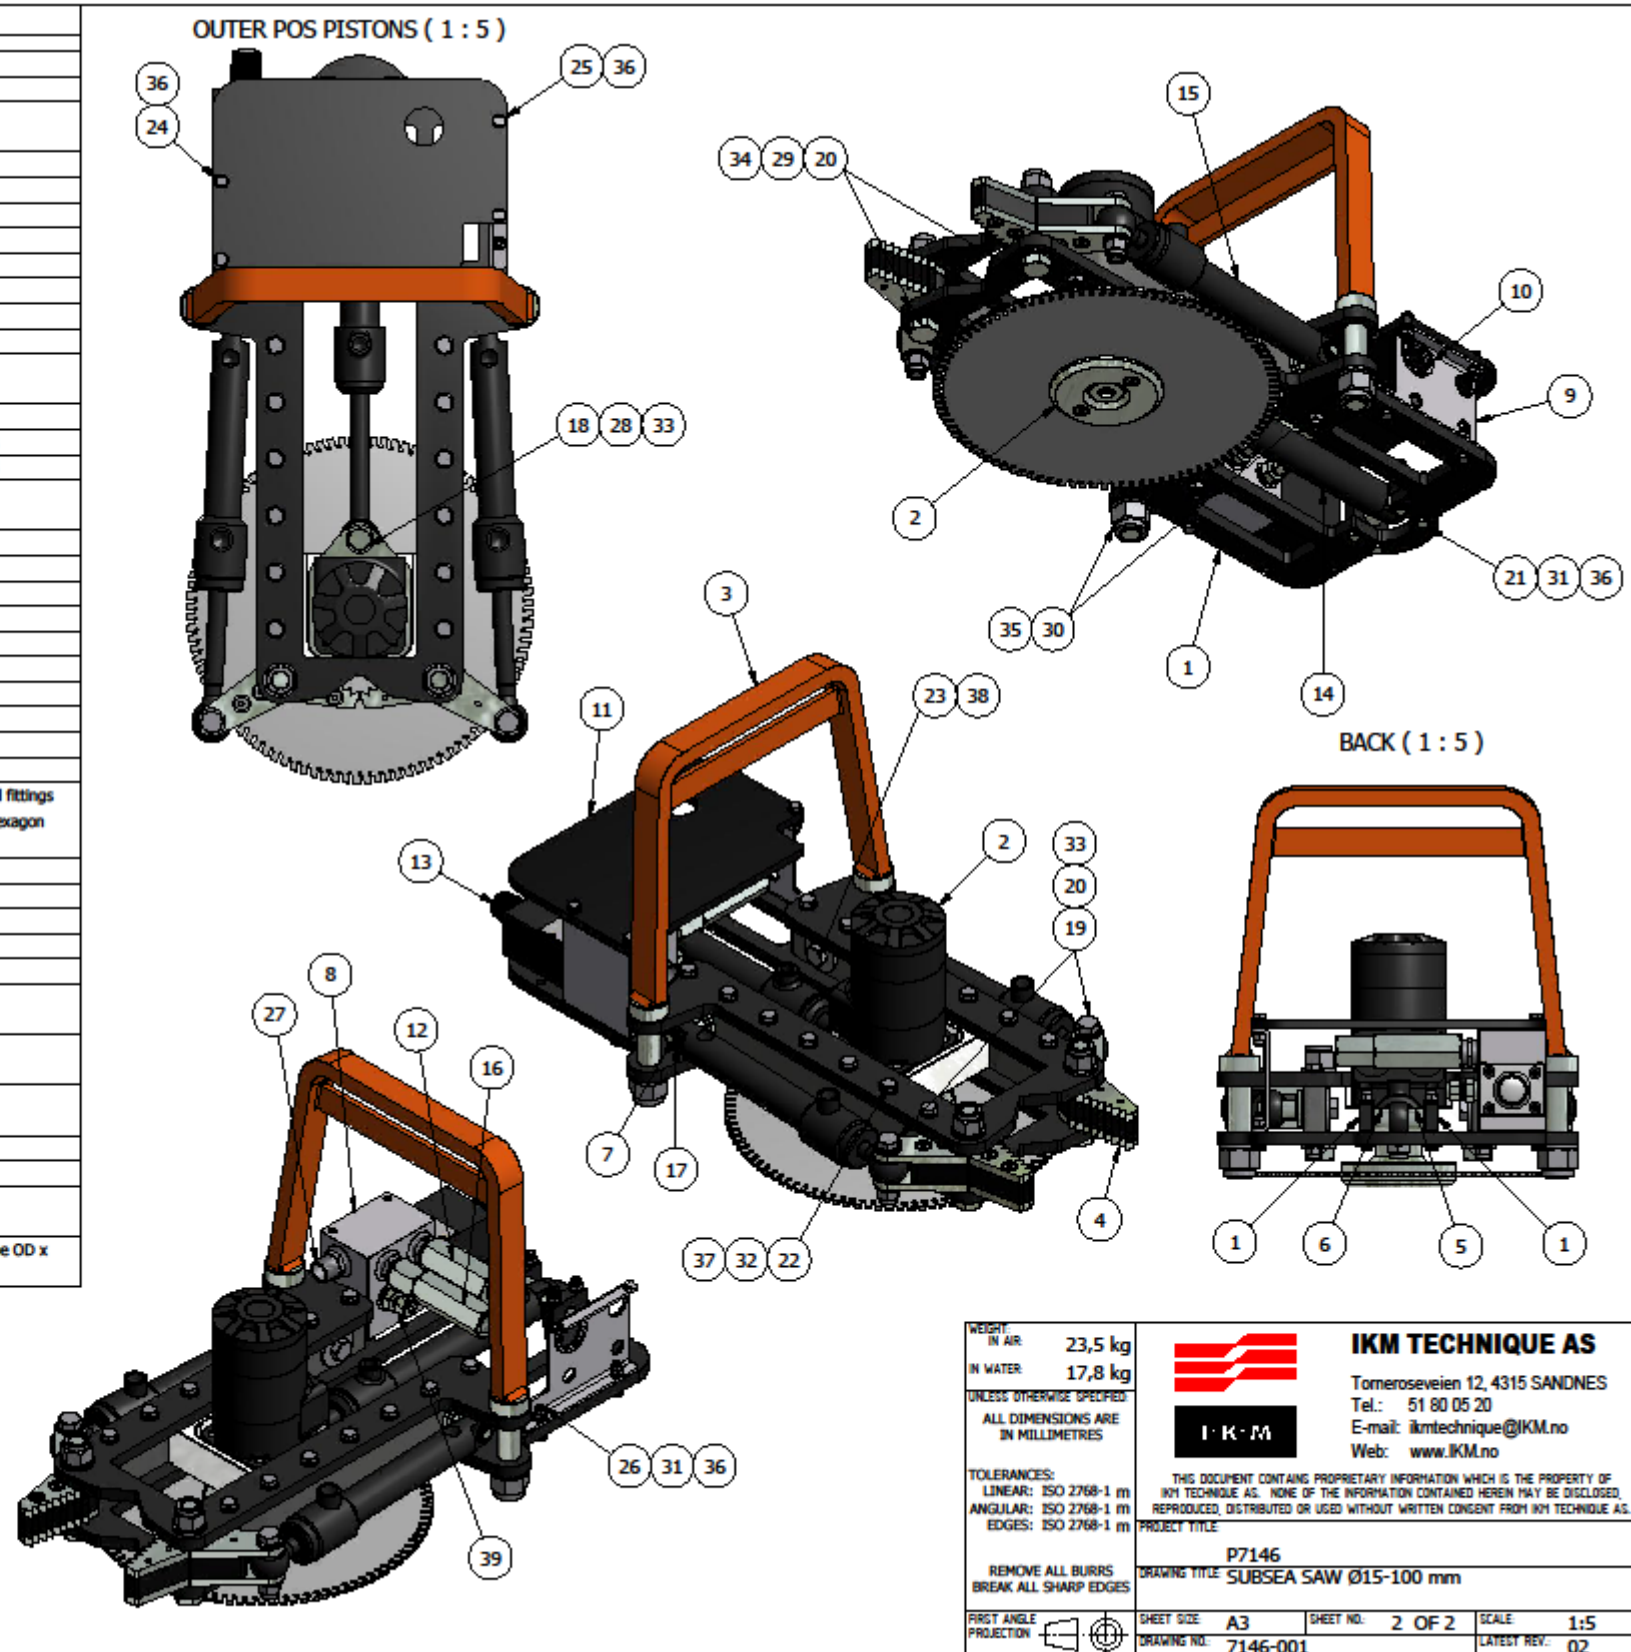

WEIGHT:	IN AIR: 23,5 kg		IKM TECHNIQUE AS
	IN WATER: 17,8 kg		
UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS ARE IN MILLIMETRES		Tomroseveien 12, 4315 SANDNES Tel.: 51 80 05 20 E-mail: ikmtechnique@ikm.no Web: www.ikm.no	
TOLERANCES: LINEAR: ISO 2768-1 m ANGULAR: ISO 2768-1 m EDGES: ISO 2768-1 m		THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION WHICH IS THE PROPERTY OF IKM TECHNIQUE AS. NONE OF THE INFORMATION CONTAINED HEREIN MAY BE DISCLOSED, REPRODUCED, DISTRIBUTED OR USED WITHOUT WRITTEN CONSENT FROM IKM TECHNIQUE AS.	
PROJECT TITLE: P7146		DRAWING TITLE: SUBSEA SAW Ø15-100 mm	
REMOVE ALL BURRS BREAK ALL SHARP EDGES		SHEET SIZE: A3	SHEET NO.: 2 OF 2
FIRST ANGLE PROJECTION		DRAWING NO.: 7146-001	SCALE: 1:5 LATEST REV.: 02

Appendix B

